



# ORC-4T

4" Touch Screen Door Entry

## User Manual v1.1

Please follow this user manual for the correct installation and testing, if there is any doubt please call our tech-support and customer centre.

The illustrations shown here are only used for reference, if there is any difference please take the actual product as standard product.

This manual and guide is designed for the product and technology stated on the front. And requires that the installation of the equipment follows the instructions given by the manufacturer and in compliance with the standards in force.

All the equipment must only be used for the purpose it was designed for.

All the products comply with the requirements of Directive 2006/95/EC as certified by the CE mark they carry.


Source To Site declines any responsibility for improper use of the apparatus, for any alterations made by others for any reason or for the use of non-original accessories or materials.

Do not route the riser wires in proximity to power supply cables (230/400V).

Cut off the power supply before carrying out any maintenance work.

For any Electrical devices Installation, mounting and assistance procedures must only be performed by specialised electricians.


Please ensure that you seek advice and correct IP settings before connecting any equipment to an IP network to ensure there is conflicts or incompatibilities.

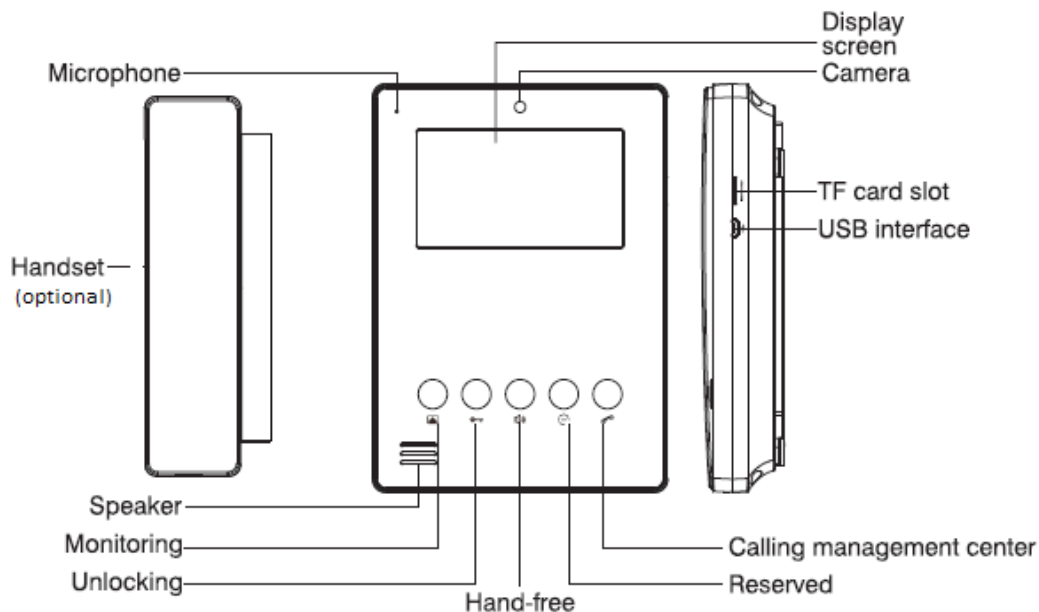

## Contents

Monitor Main Screen (Door Entry): .....	4
Incoming Call:.....	5
DND – Do not Disturb - Mute Ringtone .....	6
Timed Privacy .....	6
Concierge .....	7
Calling.....	7
Messaging .....	7
Themes.....	8
Weather .....	9
RSS FEEDS.....	9
Ringtones .....	10
Screen DIM Time.....	10
Pair Smart Phone .....	10
Voice Mail .....	11
Default Volume .....	11

## Monitor Main Screen (Door Entry):

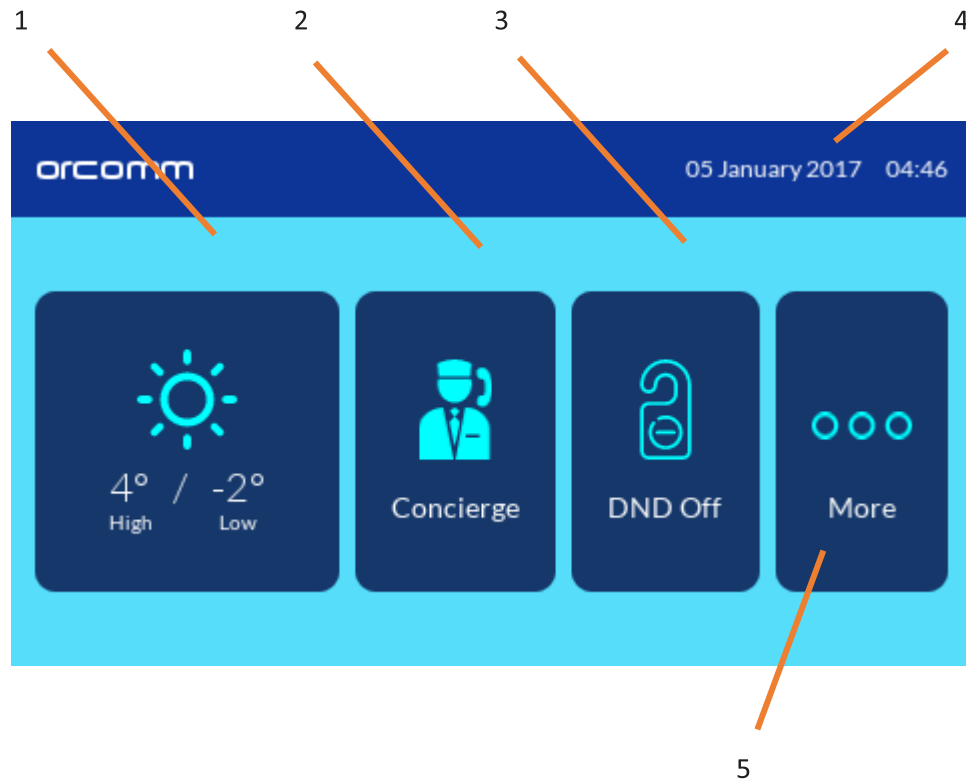

1. **Weather App** – Current local weather – When pressed weekly forecast
2. **Concierge** – Multi use button. When pressed will call concierge or




3. **DND** – When pressed will switch from Do not disturb to ON and OFF



4. **TIME and DATE**
5. **More** – When pressed will take you to more settings

## Incoming Call:

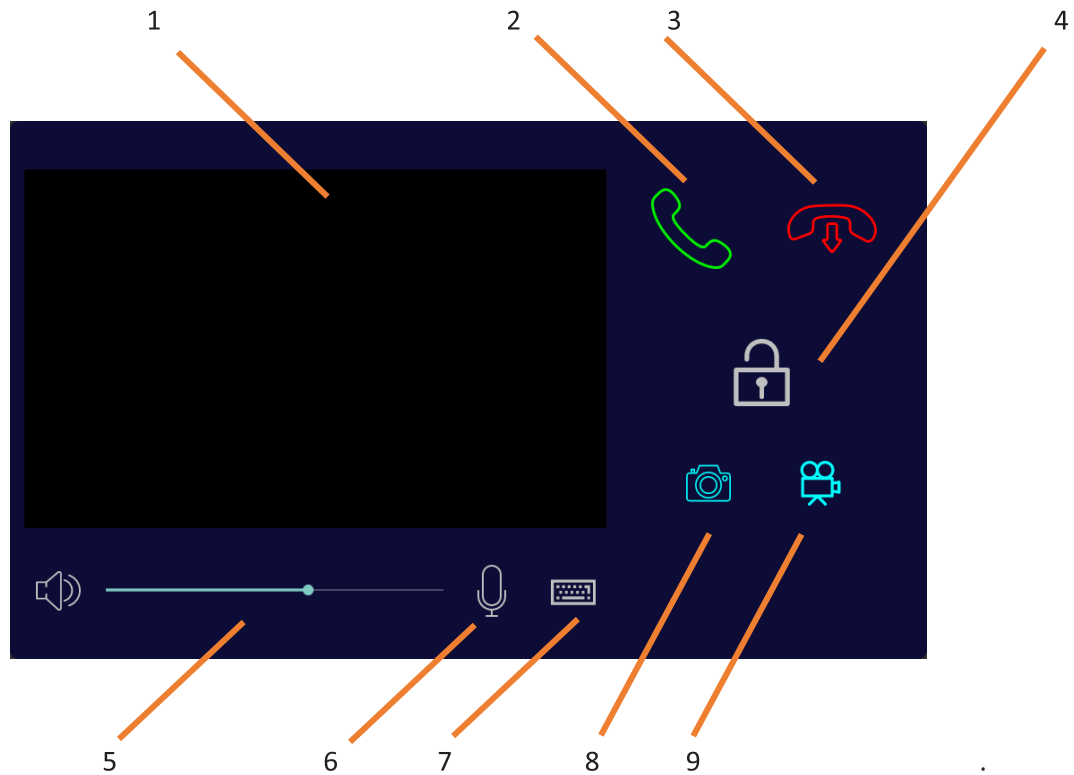


When an incoming call is made the screen above will appear on the touch screen monitor.

Video will be provided when available.

**Note:** some of the external call panels or concierge devices may not have video enabled.

1. **Window for video** – If video is available it will appear in real time
2. **Answer Call** – Press if you require to answer call and start 2 way audio
3. **Hang Up** – Press to cancel call
4. **Unlock** – When pressed it will unlock the door or open gate for caller
5. **Volume** – Adjust speaker volume during call by sliding
6. **MIC** – When pressed you can switch microphone “on” and “off”
7. **Keyboard** – Used for extra features like secure locking
8. **SNAP Shot** – When pressed will take photo of caller
9. **VIDEO** – When pressed will record audio and/or video of caller

## DND – Do not Disturb - Mute Ringtone

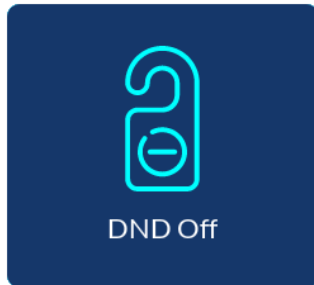

Ringtone **enabled** when incoming call




Ringtone **disabled** when incoming call


**DND OFF** = When a call is made to the screen it will ring with default tone.

**DND ON** = When call is made there will be no ringtone.

DND is typical used when you are sleeping and works by switching on and off.


## Timed Privacy

 

 Enter  menu as above then followed by



Enable Timeout and select time of choice (i.e. 8 hours)

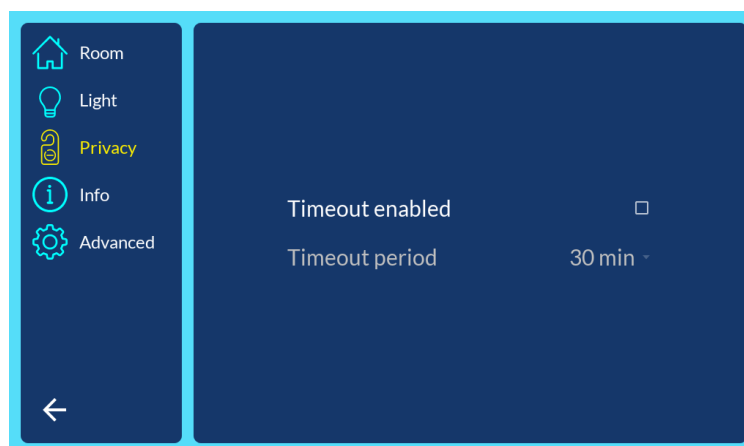

Select  to exit


## Concierge Calling




Press to make a call

If you have Concierge then you can make and receive calls to the concierge.

## Messaging

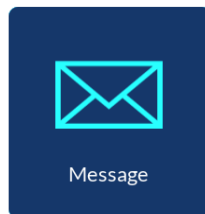


Press to read Messages

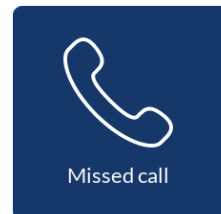

Press to view log of missed calls

Concierge can send messages to the Touch screen intercom.


Touch screen stores the last 20 call actions including calls made, missed and answered.

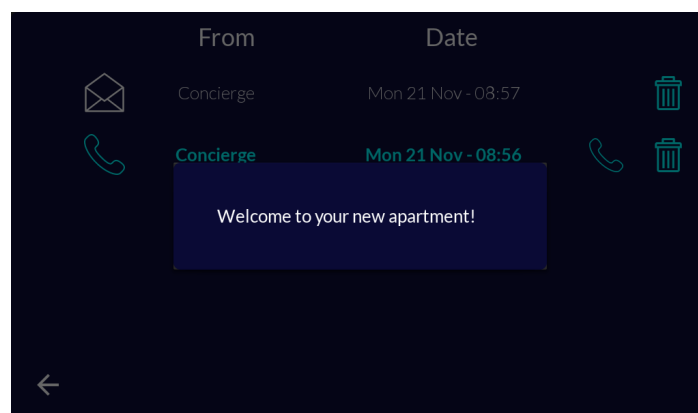


## Themes




You can change the appearance of your Touch screen.

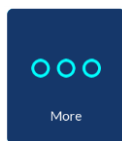

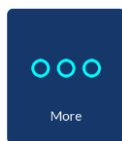Enter  menu as above then followed by



Choose the colour (tick will appear on the choice selected)

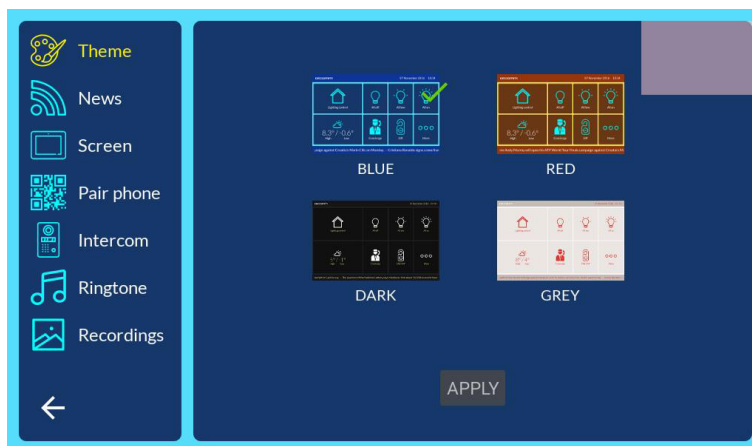

Followed by



Select  to exit



## Weather



 

Press to view weekly forecast


Smart devices that have internet enabled can request weather information from the UK National server. Like a smart phone it will use your location to get the best local weather.

## RSS FEEDS

done as a baby. What followed was an extraordinary tale of deception and heartbreak.

Smart devices that have internet enabled can request RSS feeds from online servers when enabled by the end user.

Enter  menu as above then followed by 

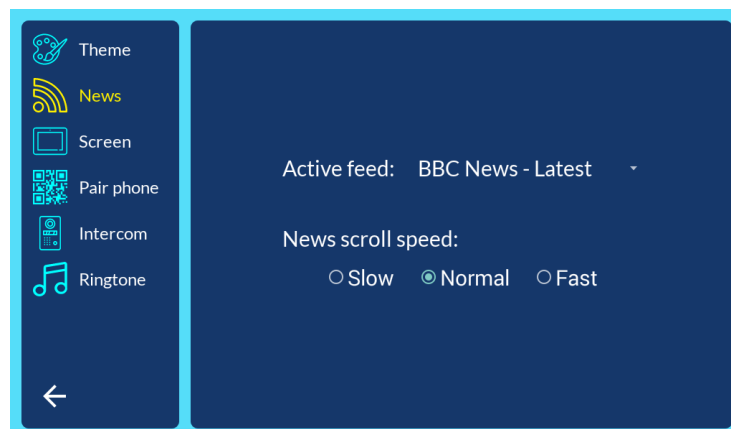



Select  to exit


## Ringtones



 
Ringtones can be changed in the extra menu

Enter  menu as above then followed by 



Select Ringtone

Select  to exit


## Screen DIM Time

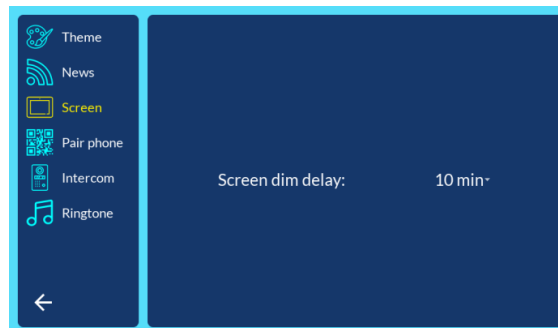


Dim screen when not in use

 
Enter  menu as above then 

Select time of choice



Select  to exit


On Touch screen select  to exit

## Voice Mail

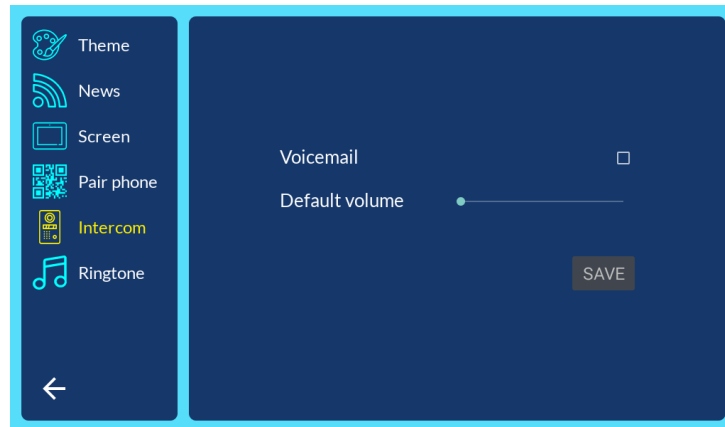

Voice mail and Default Volume

 

Enter  menu as above then followed by 

To enable Voice Mail press the box, tick will appear 

Then 

Select  to exit

## Default Volume

 Enter  menu as above then 

Select default volume

Then 

Select  to exit